


# IQOS ILUMA ONE




USER GUIDE


## IQOS ILUMA ONE™

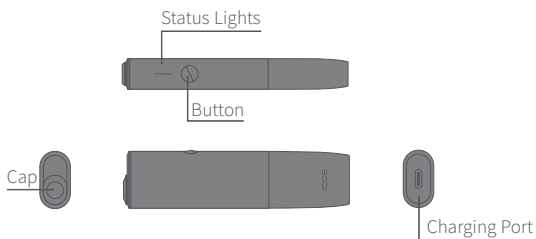

## Charging




Charging Cable




Power Adaptor

IQOS ILUMA™ is compatible only with SPECIFICALLY DESIGNED TOBACCO STICKS

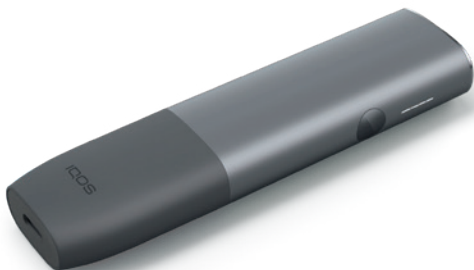


## Getting Started

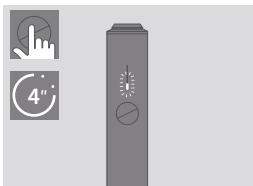

### TURN ON

Press and hold Button for 4 seconds, then release; Status Lights will turn on slowly.

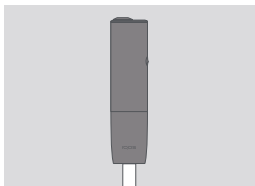


### CHARGE

Before first use, fully charge your IQOS ILUMA ONE™ with Power Adaptor and Charging Cable.  
(approx. 90 min)




# How to use your IQOS ILUMA ONE™

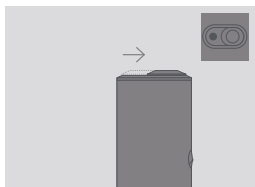

## OPEN

Slide to open.

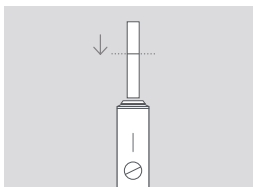

## 1. INSERT SPECIFICALLY DESIGNED TOBACCO STICK


Insert the specifically designed tobacco stick to the line on filter with filter facing outside.



## 2. START HEATING

Press Button for at least 1 second until IQOS ILUMA ONE™ vibrates and Status Light(s) pulse(s).

Keep specifically designed tobacco stick in position during the preheating.

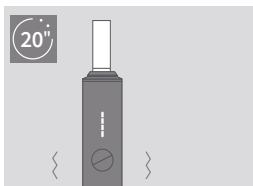


## 3. BEGIN USE

Start using once IQOS ILUMA ONE™ vibrates and Status Light(s) stay fixed.



# How to use your IQOS ILUMA ONE™

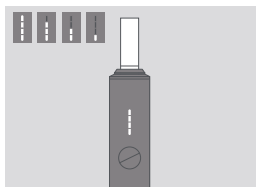


## EXPERIENCE COUNTDOWN

During use, Status Light(s) indicate the remaining time




## 4. NEARLY COMPLETE

To signal the last 30 seconds or last 2 puffs, IQOS ILUMA ONE™ will vibrate with one Light pulsing white.

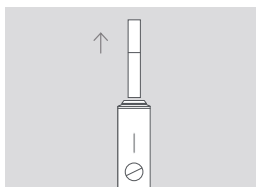

## 5. REMOVE SPECIFICALLY DESIGNED TOBACCO STICK


Remove used specifically designed tobacco stick and dispose as per Safety Warnings and Instructions.

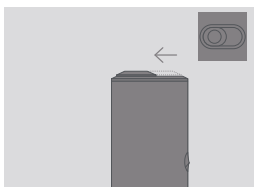

## 6. CLOSE


Slide to close.

## Quick Tips

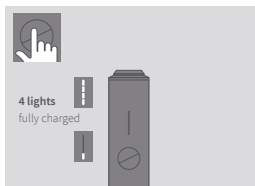

### BATTERY STATUS

Short press Button,  
Status Lights will turn on to  
indicate battery level.

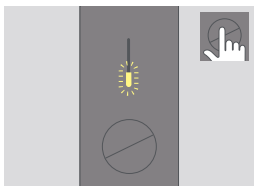


### LIGHT BLINKS YELLOW

Battery depleted, need  
to charge.



### AUTOSTOP


During use, the experience  
will stop if the specifically  
designed tobacco stick is  
moved, or removed from  
the device.

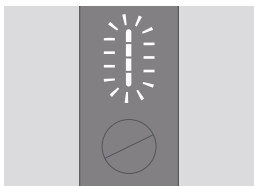

### LIGHTS BLINK WHITE TWICE


IQOS ILUMA ONE™ is outside  
operating temperature range  
(0°C~40°C).

## Quick Tips

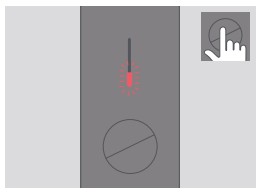

### LIGHT BLINKS RED

Reset IQOS ILUMA ONE™.  
If red light blinking persists,  
contact Customer Care.

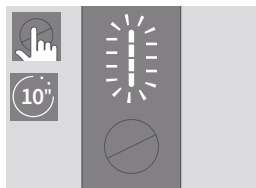

### TO RESET

Press Button for 10 seconds  
then release. All Status Lights  
will turn OFF, and turn ON,  
to confirm a RESET.

IQOS  
ILUMA



This is the safety alert symbol. It is used to alert you to potential physical injury hazards.

# SAFETY WARNINGS AND INSTRUCTIONS

**PLEASE READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USE TO AVOID INJURY.**

**These safety warnings and instructions cannot cover all possible conditions that could occur and users should exercise care and caution.**

## KEEP THESE SAFETY WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

### **Intended Users**

- IQOS ILUMA ONE™ and specifically designed tobacco sticks are for adult use only (18 years old and above).
- IQOS ILUMA ONE™ and specifically designed tobacco sticks are for adults who would otherwise continue to use tobacco or nicotine-containing products.
- Children and adolescents should never use IQOS ILUMA ONE™ or specifically designed tobacco sticks under any circumstances.
- This product should not be used by persons with reduced physical, sensory or mental capabilities or lack of knowledge unless they have been given supervision or instruction to use the product in a safe way and understand the hazards involved.

### **Tobacco and Nicotine**

- specifically designed tobacco sticks contain nicotine, which is addictive.
- IQOS ILUMA ONE™ and specifically designed tobacco sticks are not risk-free. The best way to reduce tobacco-related health risks is to quit tobacco and nicotine use altogether.
- Some users may experience abdominal pain, chest pain, choking sensation, cough, difficulty breathing, dizziness, dry mouth, dry throat, gingivitis, headache, malaise, nasal stuffiness, nausea, mouth irritation, palpitations, throat irritation, and vomiting.
- Nicotine-containing products should not be used by people who have or are at risk of heart diseases, are diabetic, or are epileptic or are experiencing seizures.
- Nicotine-containing products should not be used during pregnancy or while breast-feeding. If you are pregnant, breast-feeding or think you may be pregnant, you should quit tobacco and nicotine use altogether.
- Stopping smoking or switching to IQOS ILUMA ONE™ and specifically designed tobacco sticks or other nicotine-containing products may require the adjustment of the dosing of certain medicines (e.g. theophylline, clozapine, ropinirole).
- If you have questions about whether you should use IQOS ILUMA ONE™ or specifically designed tobacco sticks given an existing health condition, you should consult a health care professional.

## **⚠ IMPORTANT SAFETY INFORMATION**


### **⚠ WARNING Choking, Ingestion and Handling Hazard**

- Keep IQOS ILUMA ONE™ and specifically designed tobacco sticks out of reach of children and pets at all times.
- **CHOKING HAZARD** — specifically designed tobacco sticks contain small metal parts with sharp edges.
- **INGESTION HAZARD**
  - Swallowed specifically designed tobacco sticks can cause serious injury to internal organs due to small metal parts with sharp edges.
  - Swallowed specifically designed tobacco sticks can pose a risk of nicotine intoxication.
  - If specifically designed tobacco sticks are swallowed, seek medical attention immediately.
- **HANDLING HAZARD** — Do not take apart specifically designed tobacco sticks as they contain small metal parts with sharp edges. Always dispose of specifically designed tobacco sticks immediately after use according to local waste disposal regulations.

### **⚠ WARNING Electronic and Battery Hazards**

## Electrical Risks

Failure to follow these Safety Warnings and Instructions could result in fire, explosion, electric shock, injury, or damage to the product or other property:

- Only Intended Users should use IQOS ILUMA ONE™.
- Do not use IQOS ILUMA ONE™ where the use of electronic devices is prohibited.
- Do not charge or use IQOS ILUMA ONE™ or accessories if damaged, tampered with or broken.
- Do not use IQOS ILUMA ONE™ if the battery appears to be leaking.
- Only charge IQOS ILUMA ONE™ indoors, as indicated by symbol , using a manufacturer-approved Charging Cable (supplied in the box) and Power Adaptor (supplied in the box), for charging purposes. Do not use accessories not approved by manufacturer. Refer to 'Technical Data' section and [www.iqos.com](http://www.iqos.com) for details.

- This product must only be charged using Safety Extra Low Voltage. Refer to the Technical Data section of this User Guide for details.
- Do not use, charge, or store IQOS ILUMA ONE™ in places with high temperatures (such as inside a car in summer, or near heat sources such as radiators or fires).
- Do not use IQOS ILUMA ONE™ where flammable materials, liquids and gases are present.
- IQOS ILUMA ONE™, Power Adaptor and Charging Cable should not be exposed to any liquid. Do not touch them if they become wet or have been immersed in any liquid.
- Do not clean the device with any cleaning agent.
- Clean the USB charging port of the IQOS ILUMA ONE™ periodically to avoid accumulation of foreign materials (such as dust particles), and inspect USB port for foreign materials before using USB connector.
- Close cap of the device after use to avoid accumulation of foreign materials (such as dust particles) in the heating chamber, and inspect the heating chamber for foreign materials before using SPECIFICALLY DESIGNED TOBACCO STICKS.
- Handle with care. Do not drop IQOS ILUMA ONE™ or subject it to strong shock.
- This product contains no user-serviceable parts. Do not attempt to open, modify, service, disassemble or repair any component of IQOS ILUMA ONE™ or to replace any of the components or batteries.

- Do not use this product if it has been exposed to excessive cold, heat or moisture.
- Do not touch IQOS ILUMA ONE™ and/or its accessories if they overheat, spark, fume, ignite, or burn. If applicable and possible, use caution to shut off or disconnect power supply.
- Do not attempt to insert any object in the heating chamber other than SPECIFICALLY DESIGNED TOBACCO STICKS.
- Device can only be operated at temperatures  $>0^{\circ}\text{C}/<40^{\circ}\text{C}$ .
- SPECIFICALLY DESIGNED TOBACCO STICKS are single use only and should never be re-used, lit with a match, lighter or any other flame source.

#### **Battery Risks**

IQOS ILUMA ONE™ is powered with sealed Lithium-ion (Li-ion) batteries. Under normal conditions of use, the battery is sealed. If you notice that battery fluid leaks, follow these precautions:

- If fluid from leaked battery is swallowed, seek medical attention immediately. Do not induce vomiting or ingest food or drink.
- If vapor from leaked battery is inhaled, get fresh air and seek medical attention.
- If fluid from battery is in contact with skin, wash the affected area, including hands and do not touch eyes.
- If fluid from leaked battery is in contact with eyes, immediately flush with clean running water for at least 15 minutes and seek medical attention.

#### **⚠ CAUTION Thermal Burn Risk**

Failure to follow these Safety Warnings and Instructions could result in thermal burns:

- Store IQOS ILUMA ONE™ and specifically designed tobacco sticks in a clean, dry, and cool place.
- Do not expose IQOS ILUMA ONE™ and specifically designed tobacco sticks to high humidity conditions or direct sunlight.
- Do not use specifically designed tobacco sticks that have been exposed to excessive heat or moisture.
- Do not remove specifically designed tobacco sticks while in use.

#### **⚠ CAUTION Allergic Reaction Risk**

- Using IQOS ILUMA ONE™ and specifically designed tobacco sticks could cause an allergic reaction, such as swelling of the face, lips, tongue, gums, throat, or body, difficulty breathing, or wheezing.
- Stop using IQOS ILUMA ONE™ and specifically designed tobacco sticks and seek medical attention immediately if you experience any of the symptoms above as they may indicate a serious allergic reaction.

## Use of SPECIFICALLY DESIGNED TOBACCO STICKS

- Only use IQOS ILUMA ONE™ with tobacco sticks, specifically designed for IQOS ILUMA ONE™ devices.
- Never use IQOS ILUMA ONE™ with a cigarette or similar products.
- Do not use specifically designed tobacco sticks with previous IQOS device generations (IQOS 3 DUO™ or earlier).
- Do not modify specifically designed tobacco sticks in any way or add any substance to specifically designed tobacco sticks. Doing so may cause injury.

## Storage

- Device must be stored in a clean, dry, and cool place. Do not store in temperatures above 60°C.
- Store in a place inaccessible to children.

## Reporting of adverse events or incidents

- If you experience any unwanted health effect when using IQOS ILUMA ONE™ and/or specifically designed tobacco sticks, consult a health care professional.
- You can report any adverse event or incident directly by contacting your local Customer Care (details can be found in the Customer Care & Warranty booklet). By reporting side effects, you can help provide more information on the safety of this product.
- For more information please go to [www.iqos.com](http://www.iqos.com)

## TECHNICAL DATA

### Device:


IQOS ILUMA ONE™

Model M0004

Battery type: Li-ion rechargeable battery

Input: 5 V  2 A

Bluetooth® 5.0

The IQOS ILUMA ONE™ is marked with the symbol  followed by "SxxAxx," which indicates the IQOS ILUMA ONE™ can only be charged using one of the approved Power Adaptor models listed below.

### Power Adaptor:

Model: S52A21, S21A20, S21A22, S21A23, S21A25, S21A27, S82A40, S82A41, S82A42, S82A43, S82A45, S82A46

Input: 100 V-240 V-50-60 Hz 0.3 A

Output: 5 V  2 A

Output power: 10.0 W



Average active efficiency: 79.0%

No load power consumption: <0.09 W

## Use with Charging Cable

## INFORMATION FOR DISPOSING OF IQOS ILUMA ONE™

### Valid across European Union and EFTA

 This symbol on the product or on its packaging indicates that this product and its individual parts (including batteries) must not be disposed of with your other household  waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. Batteries that are not encased in the waste equipment must be separated from it



and disposed of separately before being handed in at a collection point. In addition, waste batteries can be returned free of charge at the point of sale. The deletion of any personal data on the waste equipment is your responsibility.

### **Reuse, recycling and other forms of recovery**

The separate collection and recycling of your waste equipment (including batteries) at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Disposing of waste equipment as unsorted municipal waste (e.g. destined for waste incineration or landfilling) can have negative effects on the environment and human health. Owners of waste equipment can hand them in, within the framework of the possibilities, for the return or collection of waste equipment provided by public waste management authorities, so that a correct disposal of the old devices is ensured. For more information about where you can drop off your waste equipment for recycling, please contact your local household waste disposal service or the shop where you purchased the product.

#### **For Switzerland:**

Owners of waste equipment and batteries purchased from Philip Morris Switzerland Sàrl may return them free of charge to any IQOS Boutique in Switzerland.

### **BATTERY REMOVAL INSTRUCTIONS (FOR DISPOSAL AND RECYCLING)**

**Batteries must not be removed by the consumer. At end of product life, only an authorized recycler may safely remove batteries by following the steps below.**

IQOS ILUMA ONE™ Device:

Step 1: The device should be fully discharged before disassembling it.

Step 2: Remove the cover and screws at the bottom of the device.

Step 3: Slide the assembly out from housing.

Step 4: Remove screws from the USB bracket and lift the FPC.

Step 5: Disconnect the battery connector and lift it up.

Step 6: Using a wide flat, non-sharp tool remove battery by pushing from the opening behind the engine frame to disengage the battery from the adhesive.

Step 7: Dispose of according to local regulations.

### **Confirmation of Compliance**

Hereby, Philip Morris Products S.A. declares that IQOS ILUMA ONE™ is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The official Declaration of Conformity may be found at: [www.pmi.com/declarationofconformity](http://www.pmi.com/declarationofconformity).

IQOS ILUMA ONE™ operates within 2.402 – 2.480GHz frequency band with a maximum RF output power below 10.0 dBm.

This device complies with the RF exposure limits and has been evaluated in compliance with portable exposure condition according to the EN 62311:2008.

Designed and manufactured under the authority of Philip Morris Products S.A., Quai Jeanrenaud 3, 2000 Neuchâtel, Switzerland.

#### **Switzerland:**

Imported by Philip Morris Products S.A.,  
Quai Jeanrenaud 3, 2000 Neuchâtel (Switzerland)



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Philip Morris Products S.A. and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

Further information regarding the firmware license for IQOS ILUMA ONE™ is available on [www.iqos.com](http://www.iqos.com).